

Special functions

Program the UltimateCare Washer Dryer settings at a touch to deliver outstanding results with every wash.

IntelliQuick function*

*Applicable only for UltimateCare 700 models

IntelliQuick function automatically selects the ideal cycle for your load size. IntelliQuick encompasses the following cycles: Quick 15, Daily 39, and Full Wash 45.

1. Power on the appliance and select IntelliQuick function.
2. Load your clothes.
3. Start your wash and the appliance will sense your load weight and select the right washing time.



When IntelliQuick is selected, Cycle time only shows “.”



After load is sensed, display shows the time as determined by appliance.

Save Favourite program

Follow the instructions below to save frequently used settings as Favourites.

UltimateCare 700 models

Save favourite using the app and send it to the appliance.

Note: The appliance is able to store only 1 app favourite at a time.

UltimateCare 500 models

1. Select program and set to your desired settings.
2. Press and hold on the Prewash button until you hear 2 beeps and program is selected.

To recall favourite program, turn dial to the favourite program position.

(700 models) App Favourite (500 models) Favourite



Flexibility to add forgotten clothes

When you see the add clothes symbol on the display, you can tap on Start/Pause button to pause the wash.



Wait for the door to unlock, and you can open the door to add clothes. Press the Start/Pause button again to resume the wash cycle.



Note: 'Pause to add clothes' is only available for the first 10 minutes after you have started washing.

Control your appliance with your smartphone*

*Applicable only for UltimateCare 700 models

Before you begin connecting, ensure that the WiFi router is turned on, and you have the password at hand.

1. Install our app on your device.
2. Follow the steps on the app to connect your appliance.
3. Once you're connected, you will be able to:
 - Control your machine remotely
 - Create Favourite programs
 - Schedule the start of your washing and/or drying



GO050810-001-A-28753621

Remote start functions



Remote start

When our app is installed and the wireless connection is complete, you can start and stop a program remotely by activating Remote start.



Turn on Remote start

1. Press the Remote start button.
2. Within 10 seconds, press the Confirm Start button to begin the functions and the indicator on button will light up.

Turn off Remote start

 
Press the Remote start button. The icon is off and the Remote start is disabled.



Quick Start Guide

UltimateCare 700/500 Series Washer Dryer


Scan to register and for full User Manual, or visit [electrolux.com](https://www.electrolux.com)

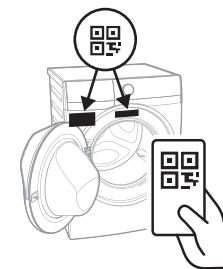


ELX_QSG_UC3_WD_700_500_DL_2925

Understanding your appliance

 Control panel

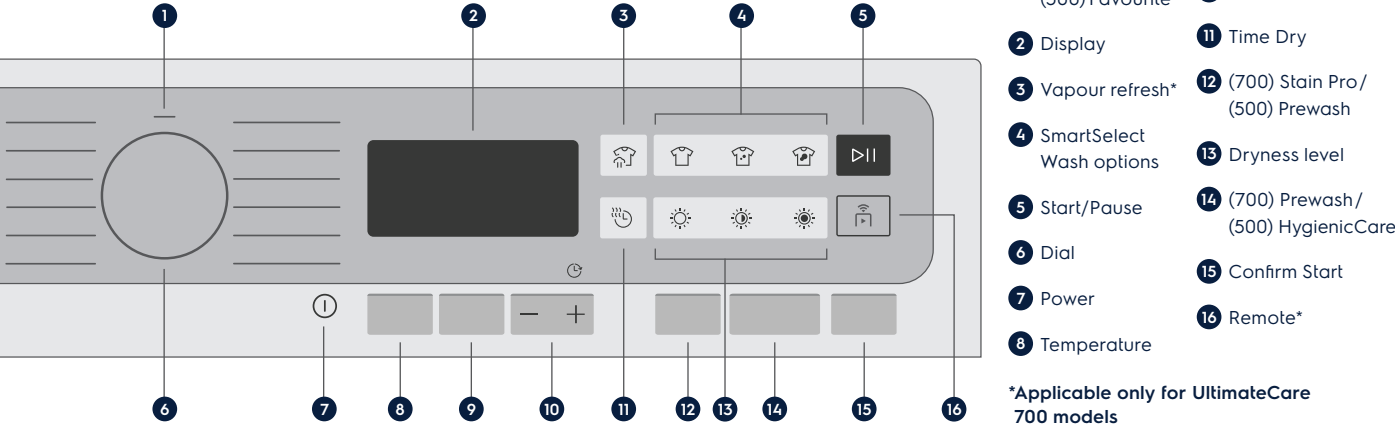

Detergent dispenser drawer

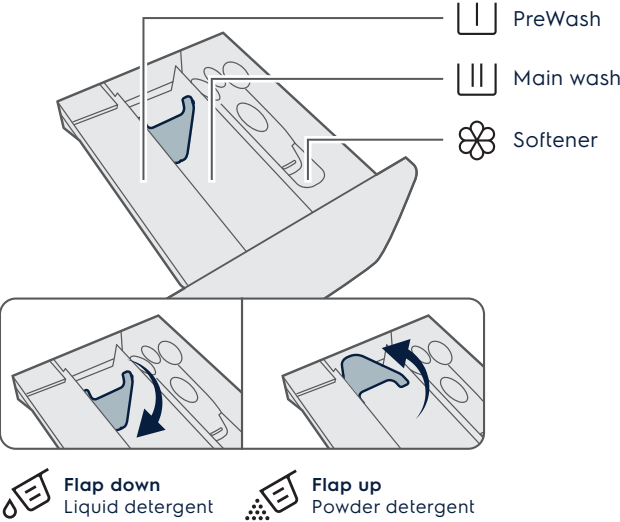 

PreWash

This compartment is only used for detergent when a 'Prewash' option is selected.

Main wash

This compartment is used for detergent on all programs.

Softener

This compartment is used for fabric conditioner and starching agent.

Start using your Washer Dryer

1. Tap the power button and load your clothes into the machine.
2. Turn the dial to select a program.
3. Tap on one of the SmartSelect wash options to set the desired wash level.



Note: Due to new legislation, two separate controls need to be activated in order to start the machine. In this case, the Start and the Confirm start buttons.

4. Pour detergent into dispenser drawer, then press Start button to begin the program.
5. Within 10 seconds, press the Confirm Start button to begin the program.

For drying options

To add drying to washing, press on the drying buttons. To set dry only cycles, press on SmartSelect wash button to turn off washing.

Program chart

Program	Max. Load (Dry clothes)		Type of load and soilage level
	Wash	Dry	
Cottons	Max.	Max.	White and coloured cotton. Normal/heavy soilage.
Eco Cottons	Max.	Max.	Low energy program for cottons. Reduces temperature and extends washing time.
DelicatesPlus	4 kg	-	Delicate fabrics. Thin cottons, acrylics, viscose and polyester.
Bedding	3 kg	-	Synthetic blanket, duvet and bedspread.
Sanitise	5 kg	-	Swissatest certified cycle. Removes 99.9% of common bacteria and viruses.
DuvetCare 60	-	2/3 kg	Steam vapour cleaning and drying in 60 mins.
Quick 15	1.5 kg	-	Lightly soiled synthetics or mixed fabrics.
IntelliQuick (applicable for 700 series)	Max.	4 kg	Lightly soiled coloured cottons. Automatic cycle time adjustment base on load size.
WashDry 60	1 kg	1 kg	1 kg mixed fabrics. Wash and dry in 60mins.
Full Wash 45 (applicable for 500 series)	Max.	4 kg	Daily wear coloured cotton clothes such as shirts, blouses, towels, and undergarments. Ideal for a normal level of soilage.
Vapour Refresh (Quickselect) (applicable for 700 series)	1.5 kg	-	Remove odours and smooth out creases using vapour.

Program and max capacity may vary based on model. Refer to User Manual for details.