





Electrolux

Instruction Book

ERGOMINI

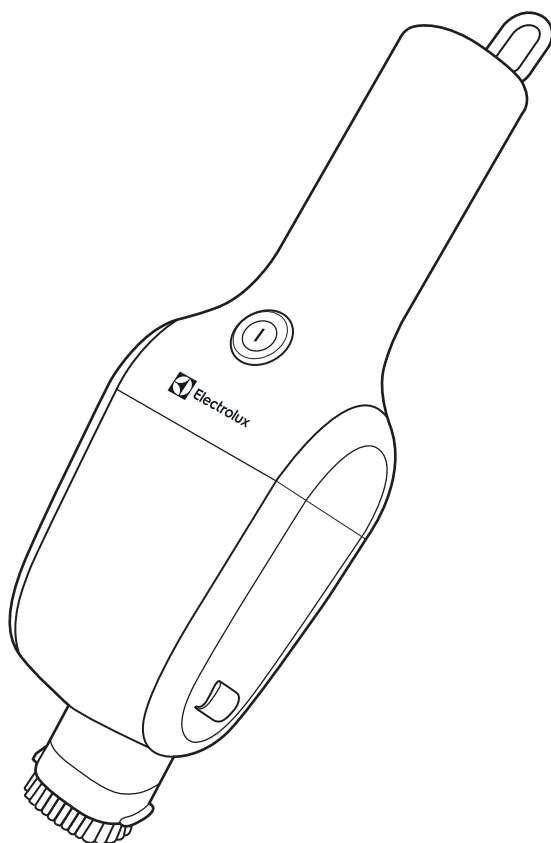


*Actual product may differ from illustration.

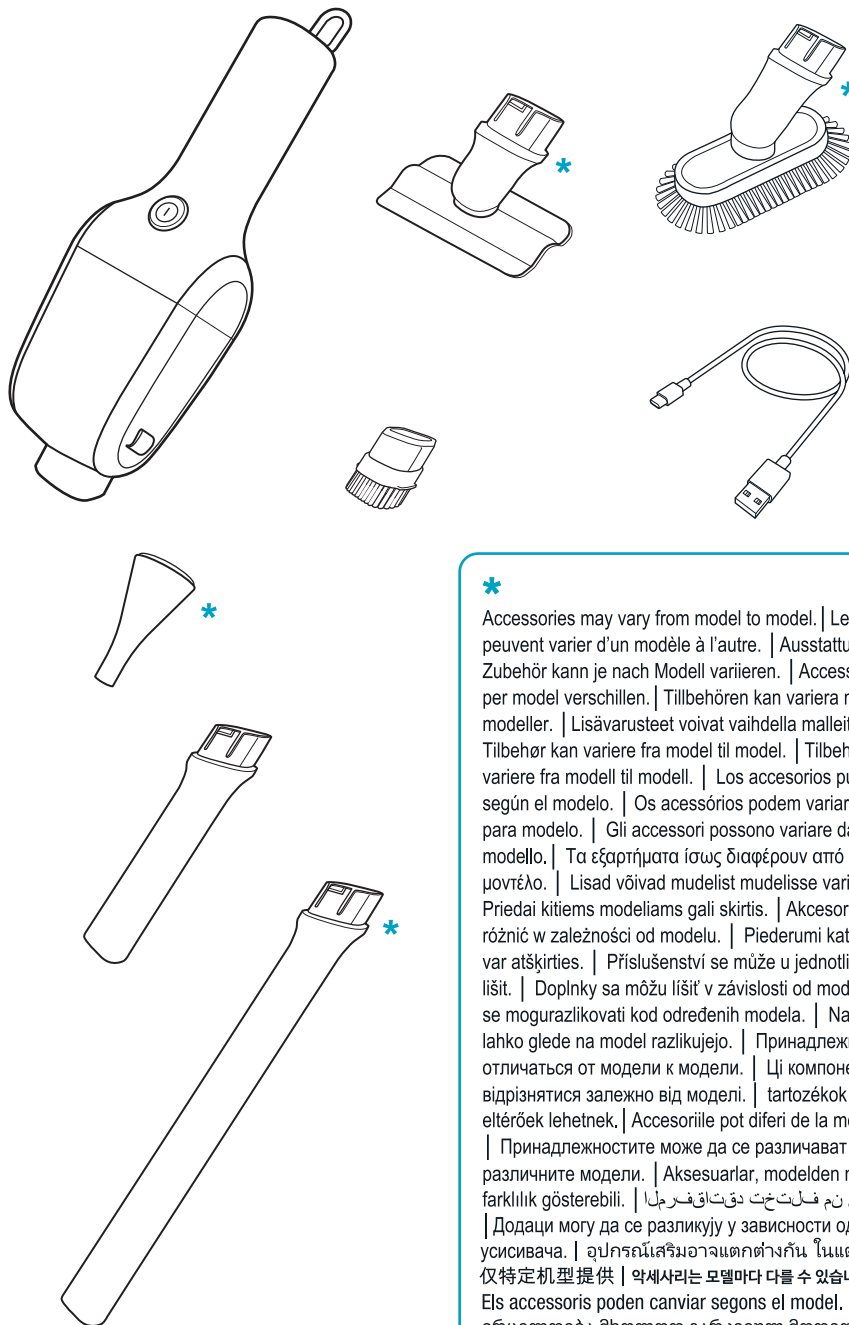








Accessories may vary from model to model. | Les accessoires peuvent varier d'un modèle à l'autre. | Ausstattung und Zubehör kann je nach Modell variieren. | Accessoires kunnen per model verschillen. | Tilbehøren kan variere mellan olika modeller. | Lisävarusteet voivat vaihdella mallittain. | Tilbehør kan variere fra model til model. | Tilbehør kan variere fra modell til modell. | Los accesorios pueden variar según el modelo. | Os acessórios podem variar de modelo para modelo. | Gli accessori possono variare da modello a modello. | Τα εξαρτήματα ίσως διαφέρουν από μοντέλο σε μοντέλο. | Lisad võivad mudelist mudelisse varieeruda. | Priedai kitiems modeliams gali skirtis. | Akcesoria mogą się różnić w zależności od modelu. | Piederumi katram modelim var atšķirties. | Príslušenství se může u jednotlivých modelů lišit. | Doplnky sa môžu líšiť v závislosti od modelu. | Dodaci se mogu razlikovati kod određenih modela. | Nastavki se lahko glede na model razlikujejo. | Принадлежности могут отличаться от модели к модели. | Ці компоненти можуть відрізнятися залежно від моделі. | tartozékok típusonként eltérőek lehetnek. | Accesoriile pot diferi de la model la model. | Принадлежности може да се различават според различните модели. | Aksesoriar, modelen modelen farklılık gösterebilir. | رخا لىدونىم نەم فلەخت دىقتاڧرملما | Додаці могу да се разликују у зависности од модела уисивача. | զւրկրոնմէշմաշառտոտադմն նմաւտէշմն | 仅特定机型提供 | 액세서리는 모델마다 다를 수 있습니다. | Els accessoris poden canviar segons el model. | ვრცელდება მხოლოდ გარკვეულ მოდელებზე.



For indoor use only.



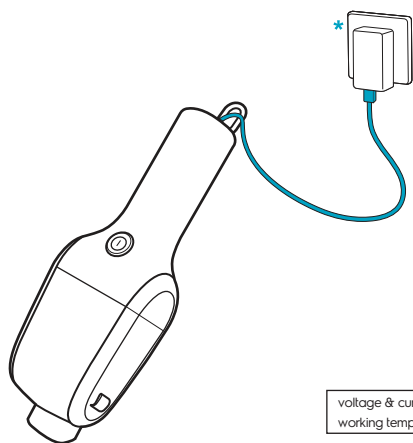




voltage & current: 5V, 2A
working temp / storage temp: 10-35°C / <60 °C

*Adaptor is not included

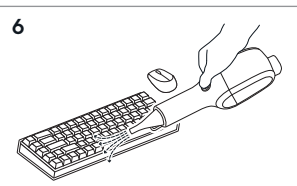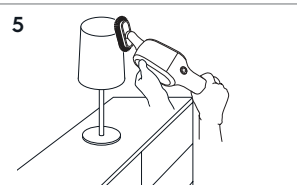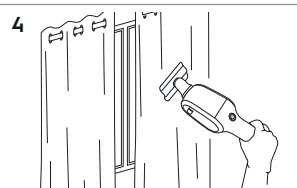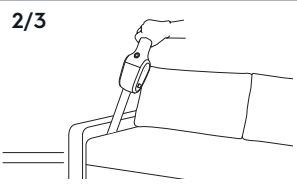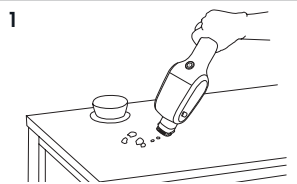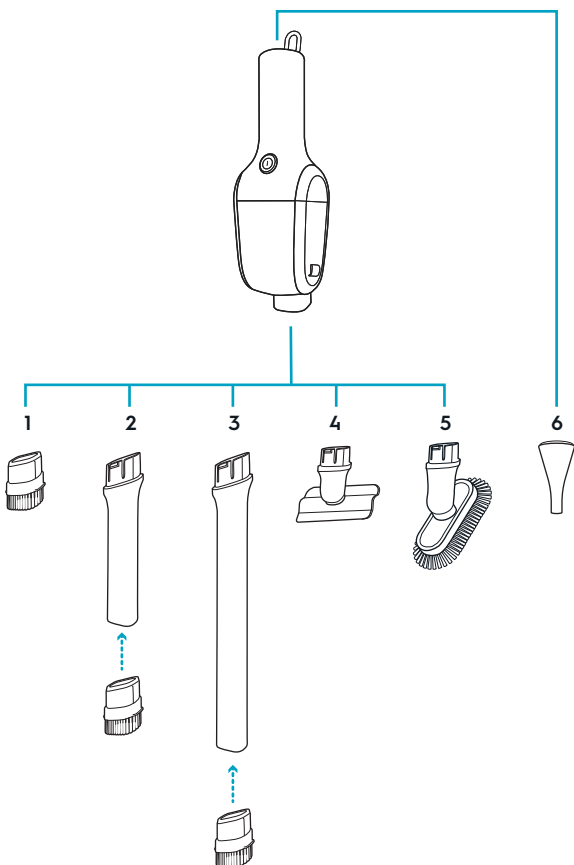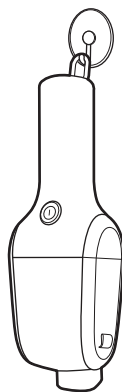

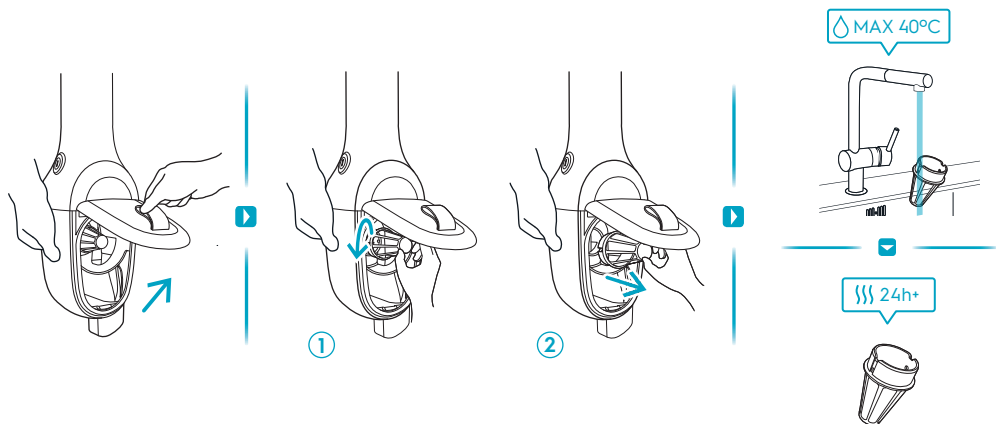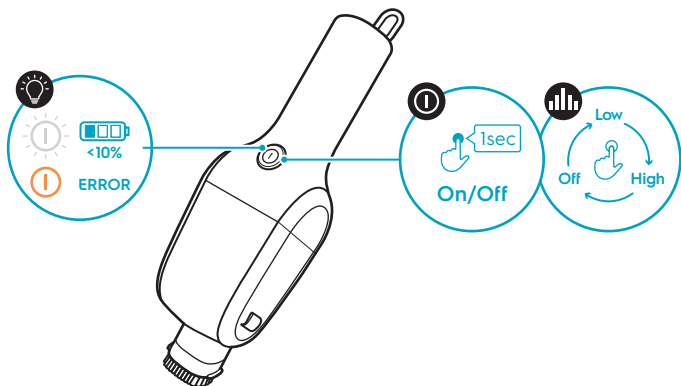

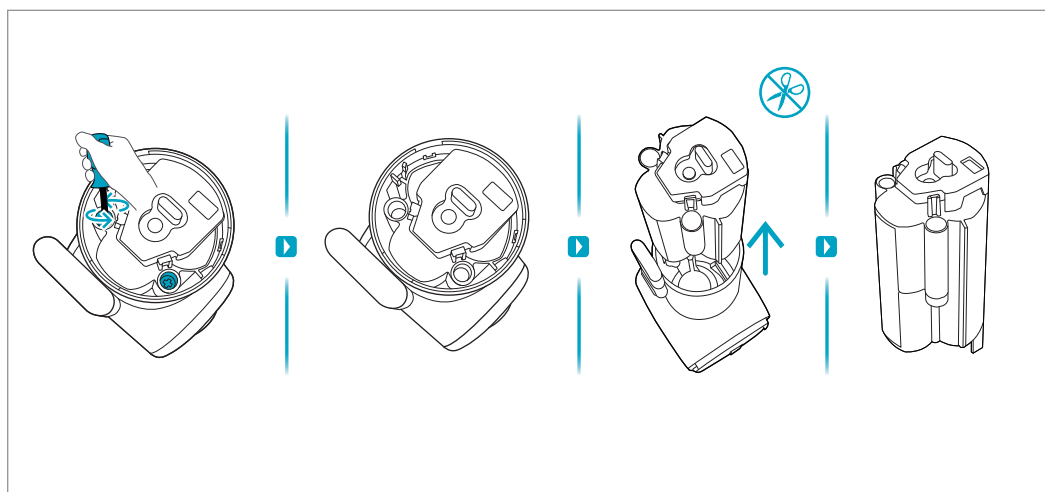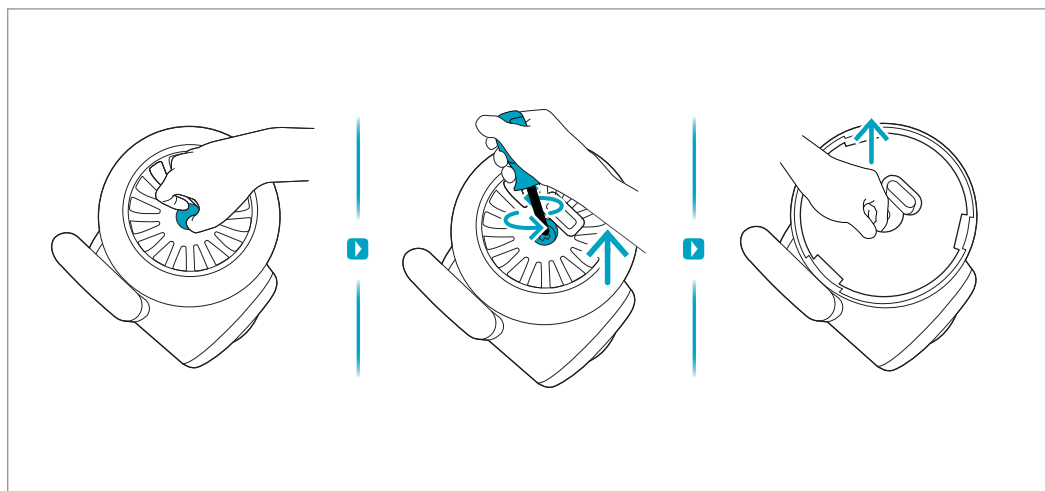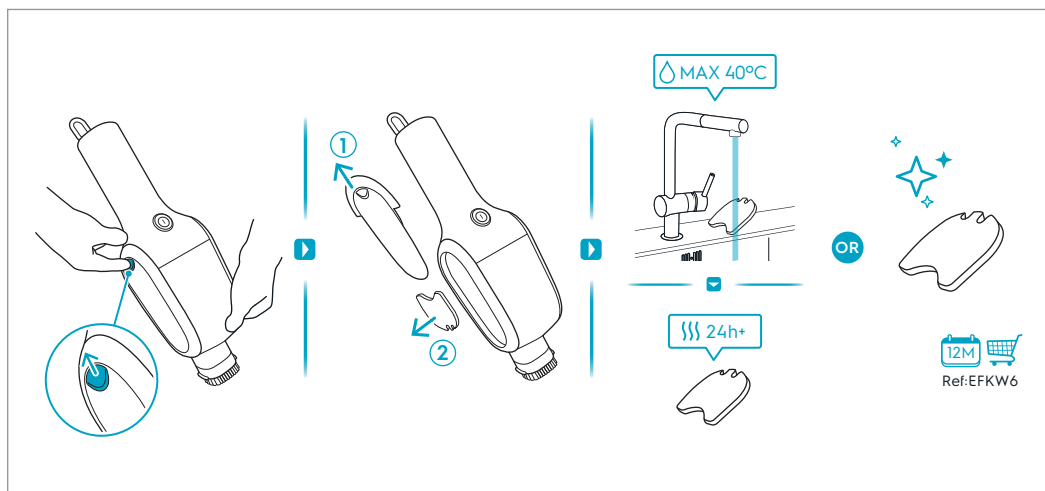

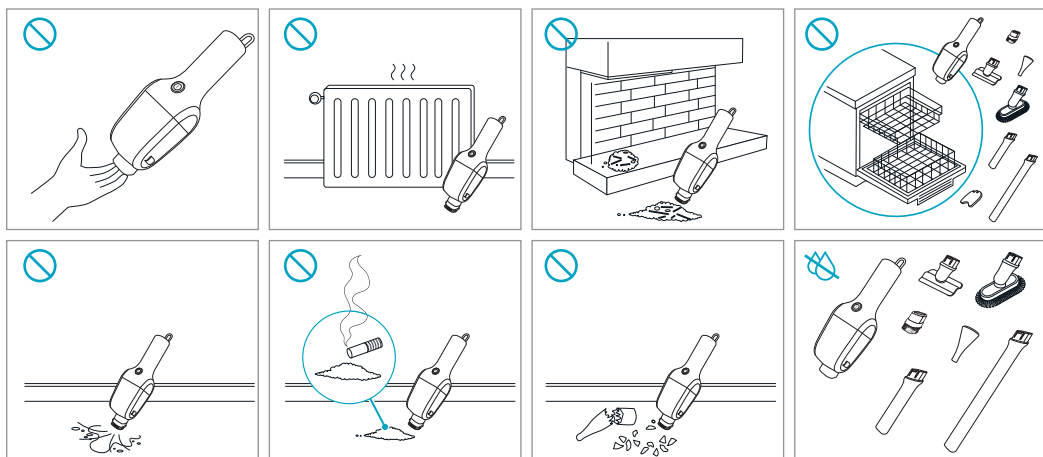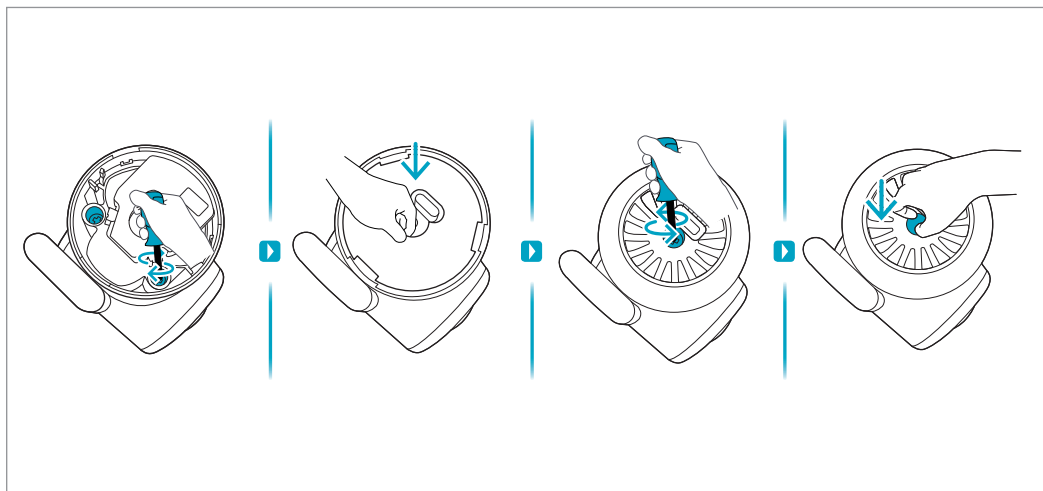


 www.electrolux.com



EFKW6

900 923 915
Performance Kit

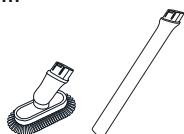

KIT27

900 923 916
Accessory Kit

*Accessories may vary by market

Before entrusting the maintenance department, please check the following points:

Common issues	Possible Cause	Solution
Cannot turn on / Yellow button light on	Low battery.	Please charge the machine in time.
	Due to the filter not being cleaned, a blockage triggered the temperature protection.	Please clean the filter promptly after each use.
	Battery pack failure.	Please change battery pack by using non-electric screwdriver.
Weak suction	Clogged filter.	Please open the dust canister cover and clean the filter promptly.
	After charging, the suction is weak and the usage time is insufficient.	Continue charging until the flashing light goes off.
	The cyclone nose cone is not installed.	Open the dust canister cover to check if the nose cone is installed.
	The filter was not installed after cleaning.	Open the filter cover to check if the filter is installed.

ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances.

Do not dispose appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

① For Switzerland:

Where should you take your old equipment?

Anywhere that sells new equipment or hand it in to official SENS collection points or official SENS recycling firms.

The list of official SENS collection points can be found at www.erecycling.ch



Share more of our thinking at www.electrolux.com